


**MXI-ISOLATOR, CEILING HUNG,  
 SPRING HANGER**

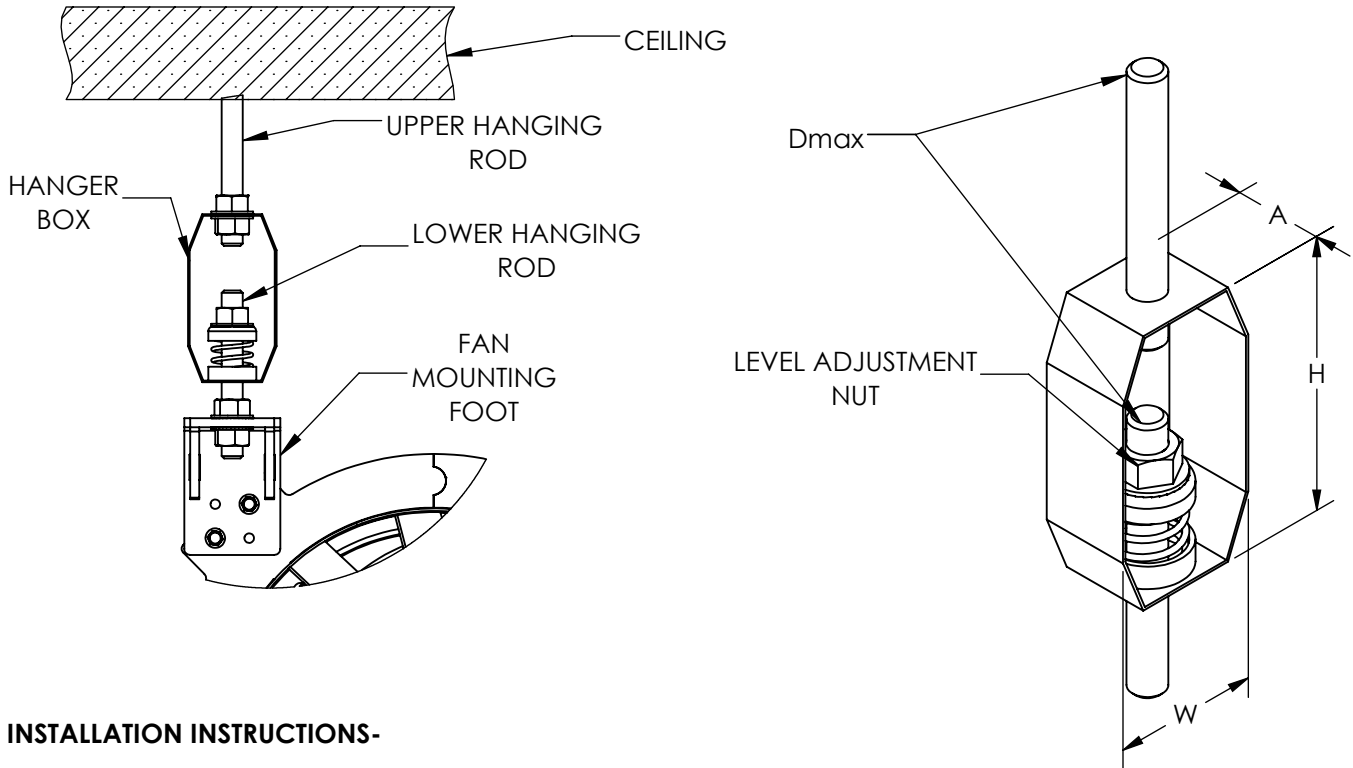

**INSTALLATION INSTRUCTIONS-**

1. LOCATE EACH HANGER IN POSITION USING DRAWING. ATTACH HANGER BOX TO UPPER HANGING ROD AND FAN TO LOWER HANGING ROD.
2. IF NECESSARY ADJUST FAN LEVEL USING LEVEL ADJUSTMENT NUT.
3. CHECK ALIGNMENT BETWEEN LARGER HOLE ON BOTTOM OF HANGER BOX AND LOWER HANGING ROD.

**DIMENSIONAL DATA**

LEVEL 1 SIZES	RATED LOAD(lbs)	RATED DEFLECTION(in)	SPRING O.D.	FREE HT	A	Dmax	H	W
122	70	1.36	1 3/4	3 3/16	2 1/4	5/8	5 1/4	3 11/16
135-165	125	1.23	1 3/4	3 3/16	2 1/4	5/8	5 1/4	3 11/16
182-222	245	1.19	1 3/4	3 3/16	2 1/4	5/8	5 1/4	3 11/16
245-300	370	0.96	1 3/4	3 3/16	2 1/4	5/8	5 1/4	3 11/16
330-365	450	1.54	3	4 1/4	3 5/8	1	8 9/16	5 9/16
402	625	1.44	3	4 1/4	3 5/8	1	8 9/16	5 9/16
445	800	1.31	3	4 1/4	3 5/8	1	8 9/16	5 9/16
490	1000	1.15	3	4 1/4	3 5/8	1	8 9/16	5 9/16
542	1250	1.09	3	4 1/4	3 5/8	1	8 9/16	5 9/16
600	1700	0.95	3	4 1/4	3 5/8	1	8 9/16	5 9/16

ALL DIMENSIONS ARE IN INCHES

REVISION:

FORM:

REPLACES: