



AXIAL WAREHOUSE EXHAUST FAN
 ELECTRICAL ACCESSORY CONNECTION

FEATURES:


1. Input Power should be connected to Disconnect Switch (if ordered) otherwise can be connected direct to Onboard Speed Controller or Motor via included junction box.
2. Mounted Electrical Accessories include Disconnect Switch and Onboard Speed Controller.
3. Mounting Panel shall be located on left side of pedestal as viewed from propeller side.

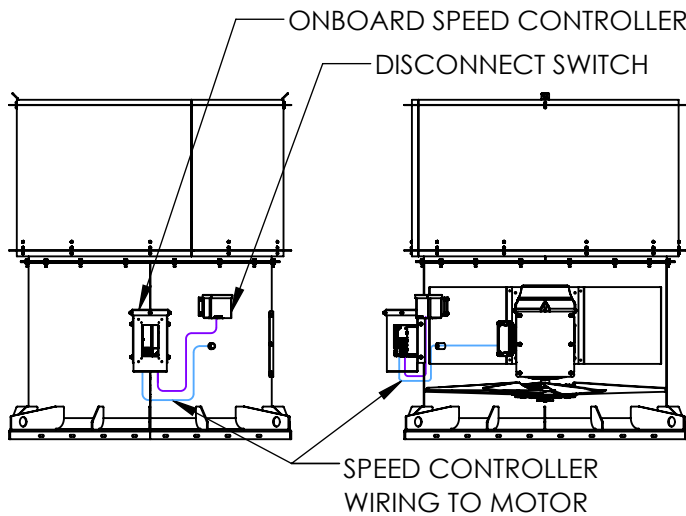


ROOF MOUNTED WITH ONBOARD SPEED CONTROLLER

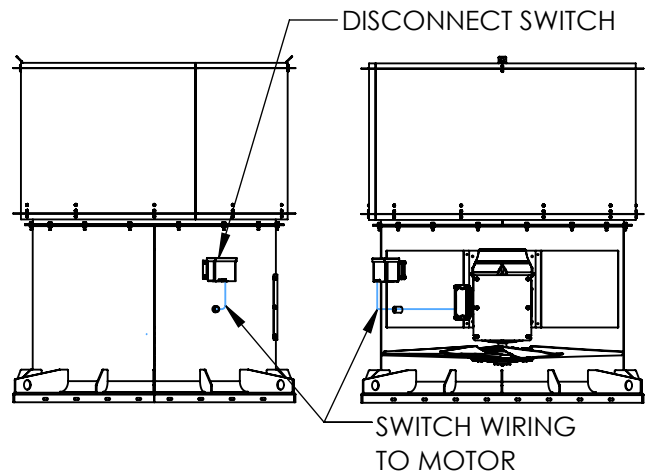


ROOF MOUNTED WITHOUT ONBOARD SPEED CONTROLLER

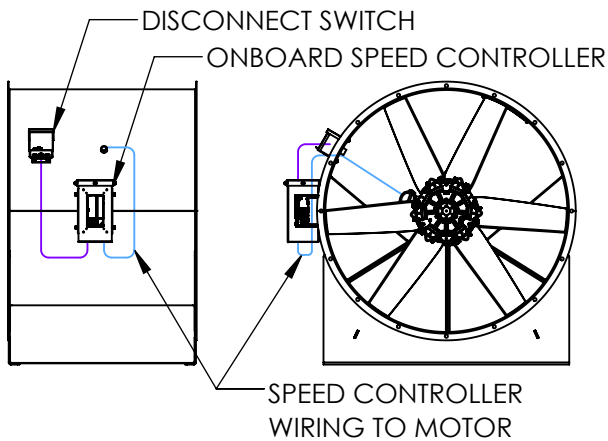


HORIZONTAL WITH ONBOARD SPEED CONTROLLER

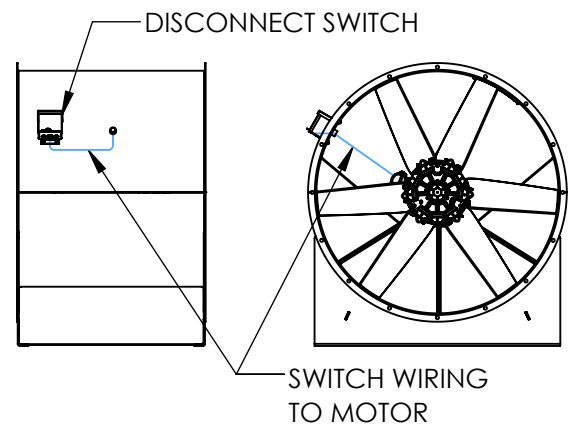

HORIZONTAL WITHOUT ONBOARD SPEED CONTROLLER

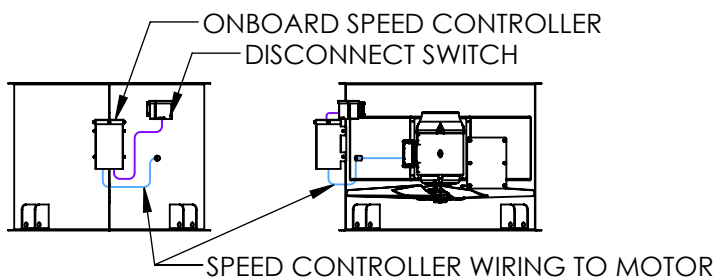

VERTICAL WITH ONBOARD SPEED CONTROLLER

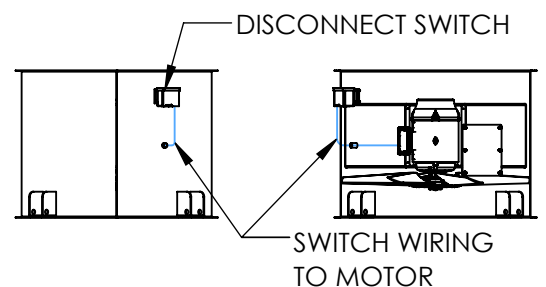

VERTICAL WITHOUT ONBOARD SPEED CONTROLLER