


# FANSIZER 2.0


## Installation Instructions

- Download the compressed folder from <http://www.pennbarry.com> .
- Double-click on the downloaded file and it should show the files found therein:

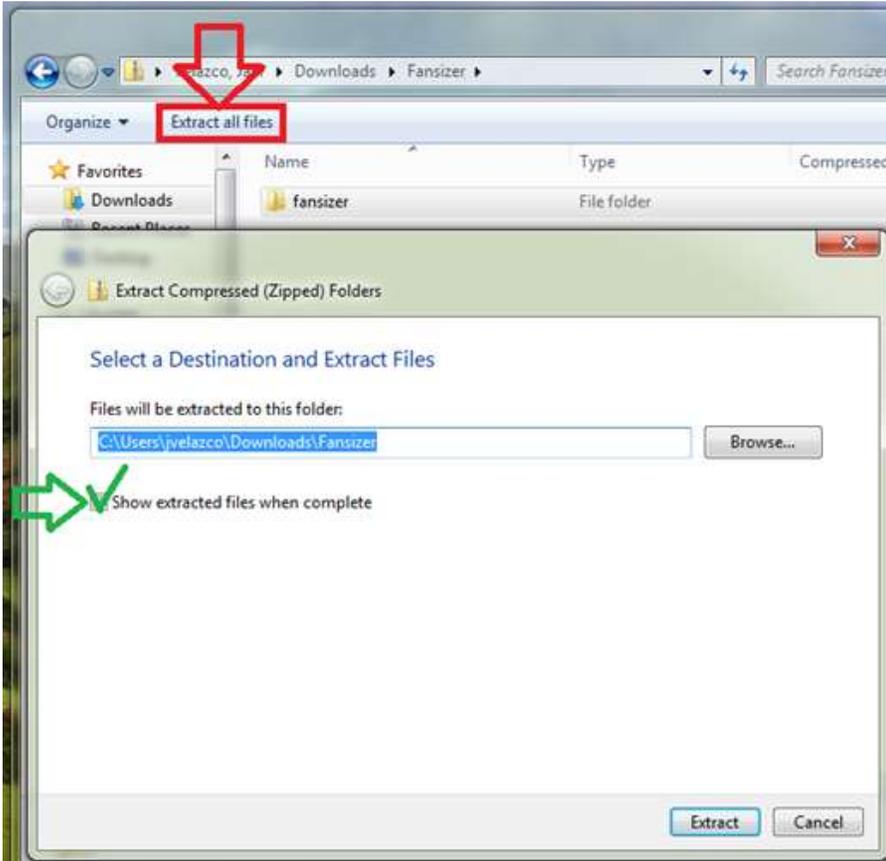


- Click on the Extract all files option boxed in red above
- To complete this process, you will need to choose a parent folder where this will be extracted into. You may want to check the box to show the extracted files—in green. Then click on the <EXTRACT> button to finalize this process.
- Go into the chosen folder and locate the Setup.exe application. Double click on it.
- After installation you will need to provide FULL ACCESS to the folder where FanSizer has been installed.
- The default folder would be located in C:\Program Files (x86)\ named FanSizer.  
Note: the 32-bit system will not have a (x86) in the path above.
- **Right-Click on this FanSizer** folder and choose the PROPERTIES option at the end of the dialog box.
- Locate the SECURITY tab and click on it. Select from the top group list the USERS group and check if the FULL CONTROL has a check mark under the ALLOW column. If yes ... skip the next

step;

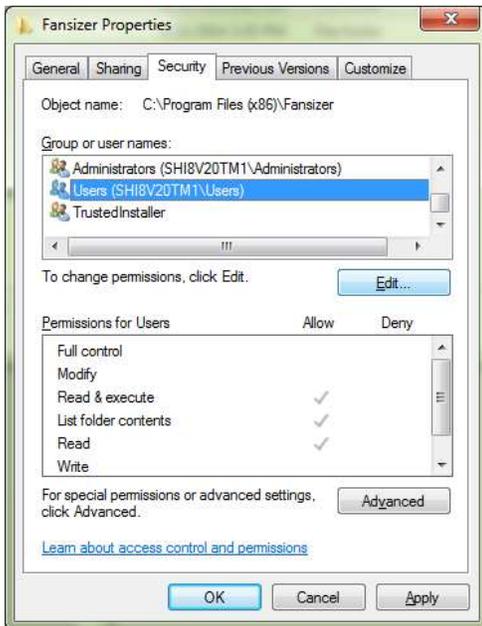


- Click on the EDIT button between these two main areas shown above:

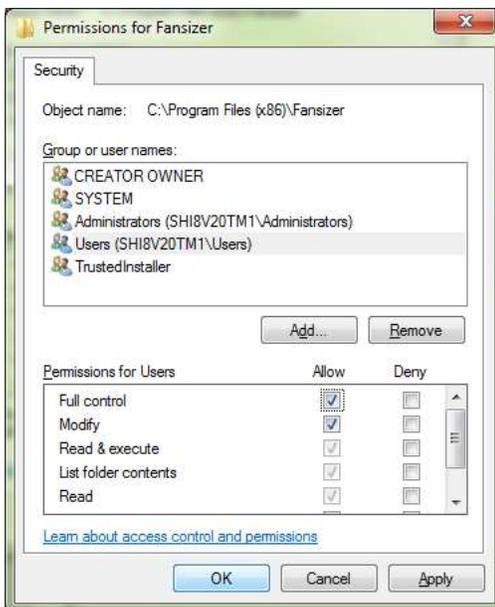


**Reselect the USERS group** in the top area and check the FULL CONTROL under the ALLOW column. CLICK ON OK

- CLICK now on the GENERAL tab and clear off the READ ONLY checkbox and click on OK.

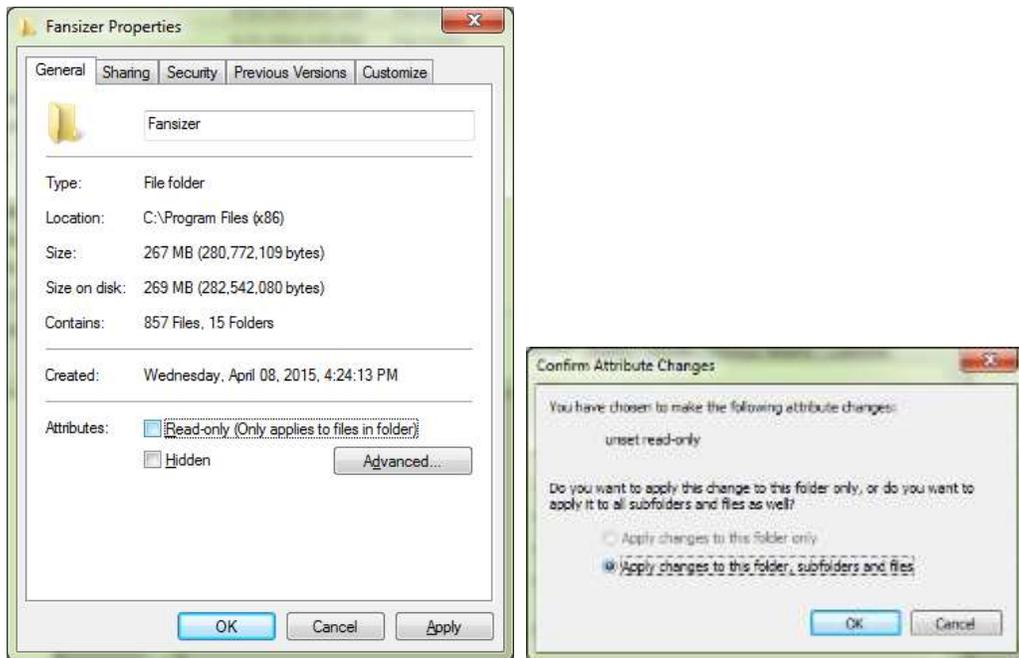

- Accept to apply the same to the folder and files underneath the FanSizer one.
- You can now open /load FanSizer 2.0 and it should present you with the following:

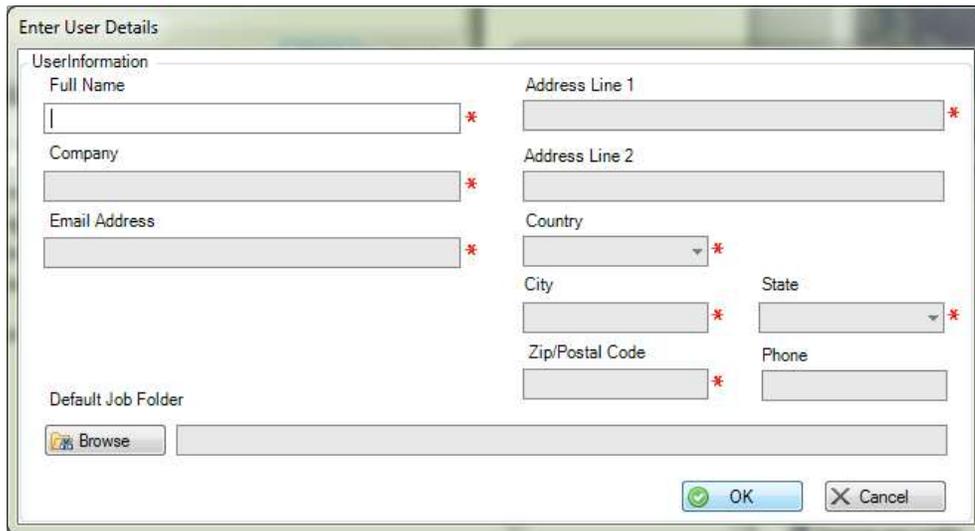

- The Default Job Folder needs to be defined and it would be a good idea to keep all these jobs in a specific location.