


**MXI-LEVEL 1, ISOLATOR-BASE MOUNT,
 RUBBER IN SHEAR**

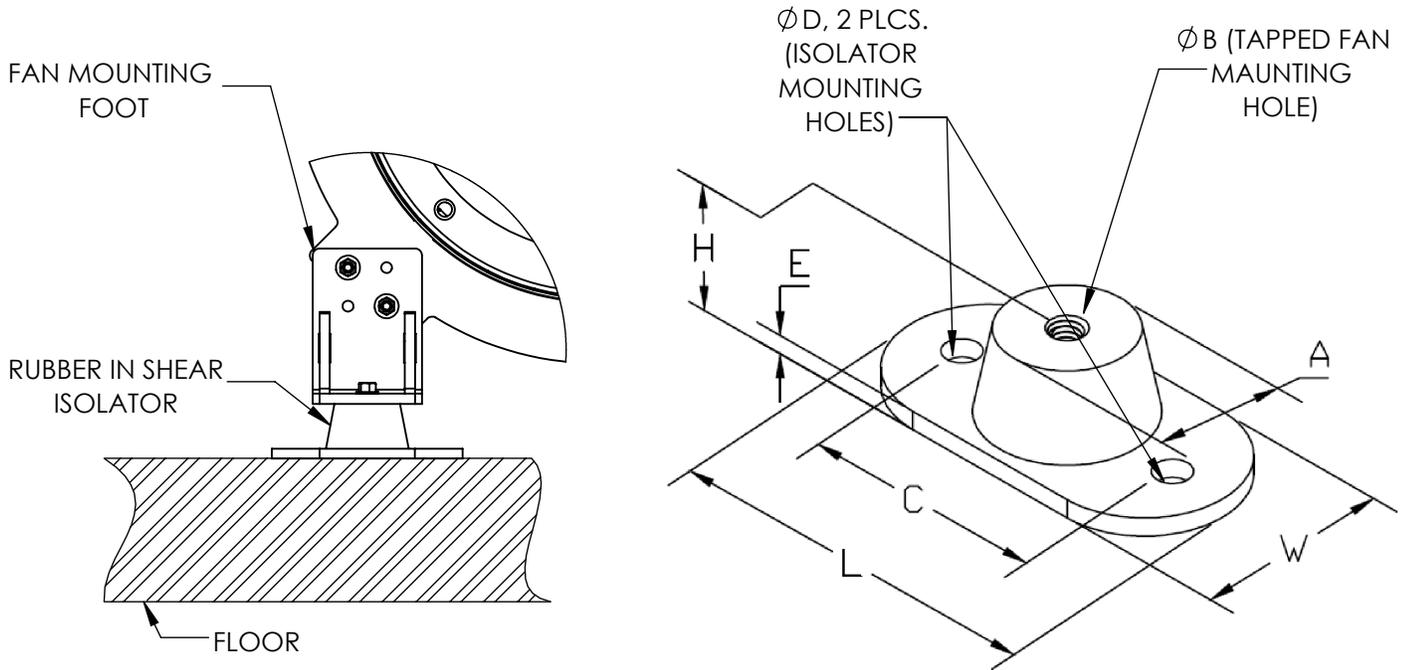

INSTALLATION INSTRUCTIONS-

1. JACK UP FAN TO BE ISOLATED, HIGH ENOUGH TO PLACE RUBBER MOUNT UNDER FAN MOUNTING FEET.
2. ATTACH RUBBER MOUNT TO FAN MOUNTING FEET WITH BOLT AND WASHER, NUT IS NOT NEEDED AS FAN MOUNTING HOLE IS THREADED.
3. ROTATE RUBBER MOUNT AS REQUIRED TO ENSURE ISOLATOR MOUNTING HOLES ARE ACCESSIBLE AFTER MOUNTING TO FAN.

DIMENSIONAL DATA

LEVEL 1 SIZE	RATED LOAD(lbs)	RATED DEFLECTION(in)	A	B	C	D	E	H	L	W
122-165	125	0.40	1 1/4	5/16	2 3/8	3/8	3/16	1 1/2	3 3/16	1 13/16
182-222	220	0.50	1 3/4	3/8	3	3/8	1/4	1 3/4	3 7/8	2 3/8
245-300	375	0.50	1 3/4	3/8	3	3/8	1/4	1 3/4	3 7/8	2 3/8
330-402	600	0.50	2 1/2	1/2	4 1/8	1/2	1/4	2 1/2	5 1/2	3 1/4
445-542	1100	0.50	2 1/2	1/2	4 1/8	1/2	1/4	2 1/2	5 1/2	3 1/4
600	2250	0.50	3 3/4	1/2	5	1/2	3/8	2 3/4	6 1/4	4 5/8

ALL DIMENSIONS ARE IN INCHES

REVISION:

FORM:

REPLACES: